

# KEYPAD CELLPHONE CABINET

MANUAL

Plug-In Storage Systems Inc. | [info@pluginstorage.com](mailto:info@pluginstorage.com)



# SUMMARY

Cabinet used as charging station for smartphones, tablet, earphone, etc., which has multiple cells with lock. Digital password can be easily typed in with a keypad.

Charging status can be demonstrated with different color of light. The cabinet has different modes for the user to choose.

Easy to use, and easy to maintain.



# INTRODUCTION

## DEVICE TO CHARGE

Designed to store, charge, and secure mobile electronic devices such as phone, camera, video game player, smart watch, MP3 / MP4 player, earphone, etc.

## CABLE

Multiple individual locking compartments with 3 in 1 fast charging cable in each bay suitable for all kinds of phones to charge simultaneously.

## MATERIAL

Made with durable, industrial-grade materials to protect from theft and frequent usage. The front and sides of the locker can be custom branded to display your marketing.

## LOCATION

Perfect for schools, convention centers, airports, hotels, fitness centers, healthcare facilities, hotel lobbies, waiting areas, exhibitions, public libraries and events or anywhere electronic devices are used.





# SPECIFICATION

## ESSENTIAL DETAILS

**Input voltage:** 100-240 V/1.2 A

**Lock:** Pin Pad Lock

**Material:** Cold Rolled Steel

**Use:** Camera, Earphone, LAPTOP, Microphone, MP3 / MP4 ...

**Output Voltage:** 5V/2.1A

**Output Power:** 180W

**Outlet:** EU, US, UK, AU etc.

## PIN PAD LOCK

### -Easy Operation

4~6 digits password

### -Security

Admin pin code protection

### -Convenient

(1) *Public*: password resets after use

(2) *Private*: one password and won't be reset after use

## CHARGING CABLE

**-100% Device Compatibility:** Full-speed charging for most device on the market including iPhones, Android phones, Amazon Kindles, and GoPro Cameras. Guests can even use their own USB charging cable.

### -3 Charging Connectors:

(1) *Lightning* - iPhones

(2) *Type C* - Android phones

(3) *Micro USB* - Android phones

## POWER SWITCH

-Power Switch

-Fuse Protection

-All kinds of plug standard are available, such as, EU, US, UK, AU etc.



# USAGE

## FIRST USE

- Default user password is "1111" and default admin code is "00000000".
- Pin pad lock uses AAA battery x 4.

- 1) Please enter new user password with 4-10 digits (if not changed, please use the default user password "1111"), and then press the green confirm button to open the lock.
- 2) If the password is correct, green light is on. If the password is incorrect, yellow light flashes.
- 3) Please pull outward to open the door when the green light is on.





Unlocking: enter the correct password and press the green confirm button. When the green light is on, the lock tongue will open, and the cabinet door will be opened.

Locking: there are two different modes of operation, as follows:



- a. private*: the cabinet door can be pushed to the closed state
- b. public*: when the lock is unlocked, push the cabinet door to the closed state, and enter your customized password code, press the green confirm button to lock the door.

### 4) Change modes

- a. private mode → public mode

Press"  +  + 4 +  + administrator code + 

- b. public mode → private mode

Press"  +  + 5 +  + administrator code + 

Note: the green confirmation button is the password confirmation button; the C button is the clear button.

## SETUP PASSWORD

The default user password set by the manufacturer is for you to use when you open the lock for the first time. For the sake of security, please be sure to change the factory password when you use the lock for the first time.

The user password consists of 4-10 digits. The password can be saved for a long time after power failure. The user password can be changed by the user.

### a. Change User Password in Private Mode

Change Method: press the green confirm button twice and the yellow light blinks → enter the old user password → press the green confirm button → enter new password → press the green confirm button to confirm, the green light will be on once, after two beeps, the new password is successfully changed.

### b. Change User Password in Public Mode

The user password in public mode does not need to be changed. The customized password is the password to unlock.

### c. Change Admin Code (Private and Public Mode)

The admin code consists of 6 to 10 digits. The password can be saved for a long time after power failure. The admin code can be changed by the administrator.

Change Method: press and hold the green confirm button for 5 seconds and the yellow light blinks → enter the old admin code → press the green confirm button to confirm → enter the new admin code → press the green confirm button to confirm and the green light is on once and the admin code is successfully changed after two beeps.

## PASSWORD PROTECTION

If you enter an incorrect password, the yellow light blinks for four times and the buzzer sounds for four times. If you enter an incorrect password for three consecutive times, the system will automatically lock for one minute. In this case, the operation buttons do not respond, which can effectively prevent malicious password theft.

## BATTERY - LOW ALERT

When the battery voltage is too low, the red-light blinks after entering the password to unlock and there are four group sound alarms. After the low voltage alarm, the lock can be unlocked for about 200 times. It is recommended that you replace the battery as soon as possible.

## **EMERGENCY PROCESSING**

1) When the user forgets the user password, please use the admin code or software code to unlock. After unlocking, the user password will return to default user password "1111".

2) If the battery in the lock is insufficient, use the attached external power cable (micro-USB cable) and a power bank to unlock. (There's a micro-USB port at the bottom of pin pad lock)



# PYSICAL DIMENSION

